



# Acer Aspire One 532h-2806 Battery Replacement

This replacement guide is for the Acer Aspire One 532h-2806 in purple. This guide focuses on removing and replacing the battery.

Written By: Julie Paula



## INTRODUCTION

This guide describes how to replace the battery, which detaches from the laptop. This may need to be done if the laptop will not charge properly.

## Step 1 — Battery



**⚠** Make sure the Acer Aspire One 532h-2806 is powered off and disconnected from any power outlets.

- Turn the device, upside down.
- The battery is located on the backside of the laptop. On this version, it is white.

## Step 2



- Place your right thumb on the slide-release button under the battery on the right side.
- Slide the button to the right to unlock the battery. The slide-release will turn red.
- Place your left thumb on the slide-release button under the battery on the left side.
- Slide the button to the left. This will release the battery.



## Step 3



- Slide the battery away from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 06:37:04 AM.